


# FILAFORM ADHESIVE SPRAY



## Did You Know?

**70% of print failures are caused by poor bed adhesion and warping.**

A poor first layer can result in a failed print wasting valuable filament, time and patience as well as cause catastrophic printer failure by "the blob of death."

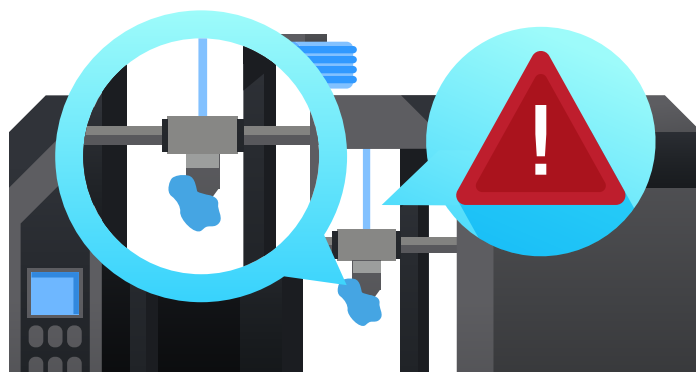

## The Solution

Our adhesive spray was developed through 8 years of extensive R&D with leading industry experts

Available in a standard version for low temperature materials (PLA, PETG, TPU, Silk)



Extra Strong version for ABS, ASA, Nylon, PC, PCTG and other high temperature materials

## 3 Simple Steps

- 1 Spray**  
10 cm from the build platform
- 2 Print**  
A heated bed is recommended
- 3 Enjoy**  
Model will self release once cool



## HOW DOES IT BENEFIT THE END USER?



### Long lasting

Lasts for over 150+ sprays



### Easy to apply

Simply spray and print




### Non-toxic

Removable with warm water



### Self release

Prints release on completion

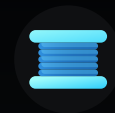

### All filament

Compatible with all materials



### Super strong

Prevents poor adhesion & warping